


IF YOUR SYSTEM HAS A BLUE WIRE

S-Tech 4 units made previous to January 1, 2018 have a Blue Wire Lead to power the lower LEDs on the switch housing.

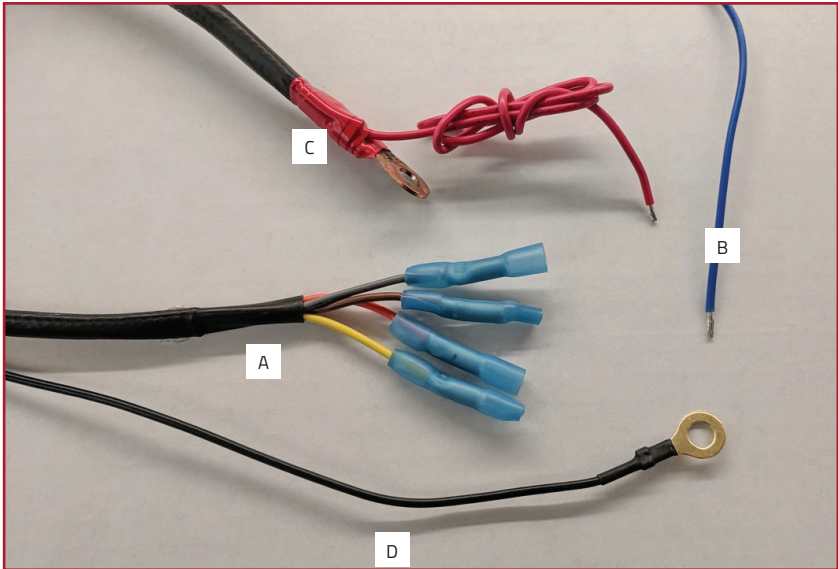

WIRE "B" is to power the lower second LED of the Dual LED rocker switches.

If your system has a Blue Wire there are 2 options for installation:

Option 1 If you want the lower LED lights to turn on when the parking or headlights are "ON" then connect the "BLUE, wire "B" to the wire located in the center of the 3 wire connector located at the Parking Light located in the grill. (It is advised that you use a test light to confirm that the center wire on your specific model year parking light IS the wire that gets energized when you turn your parking lot on.

Option 2 If you would like the lower LED lights to turn on with the ignition then connect the blue wire to the accessory red wire, "C" before connecting the red accessory wire with fuse tap into M9 position in the vehicles power distribution box.