




Installation Guide 16-17 Tacoma

Align template to rounded edge and push forward as far as it will go

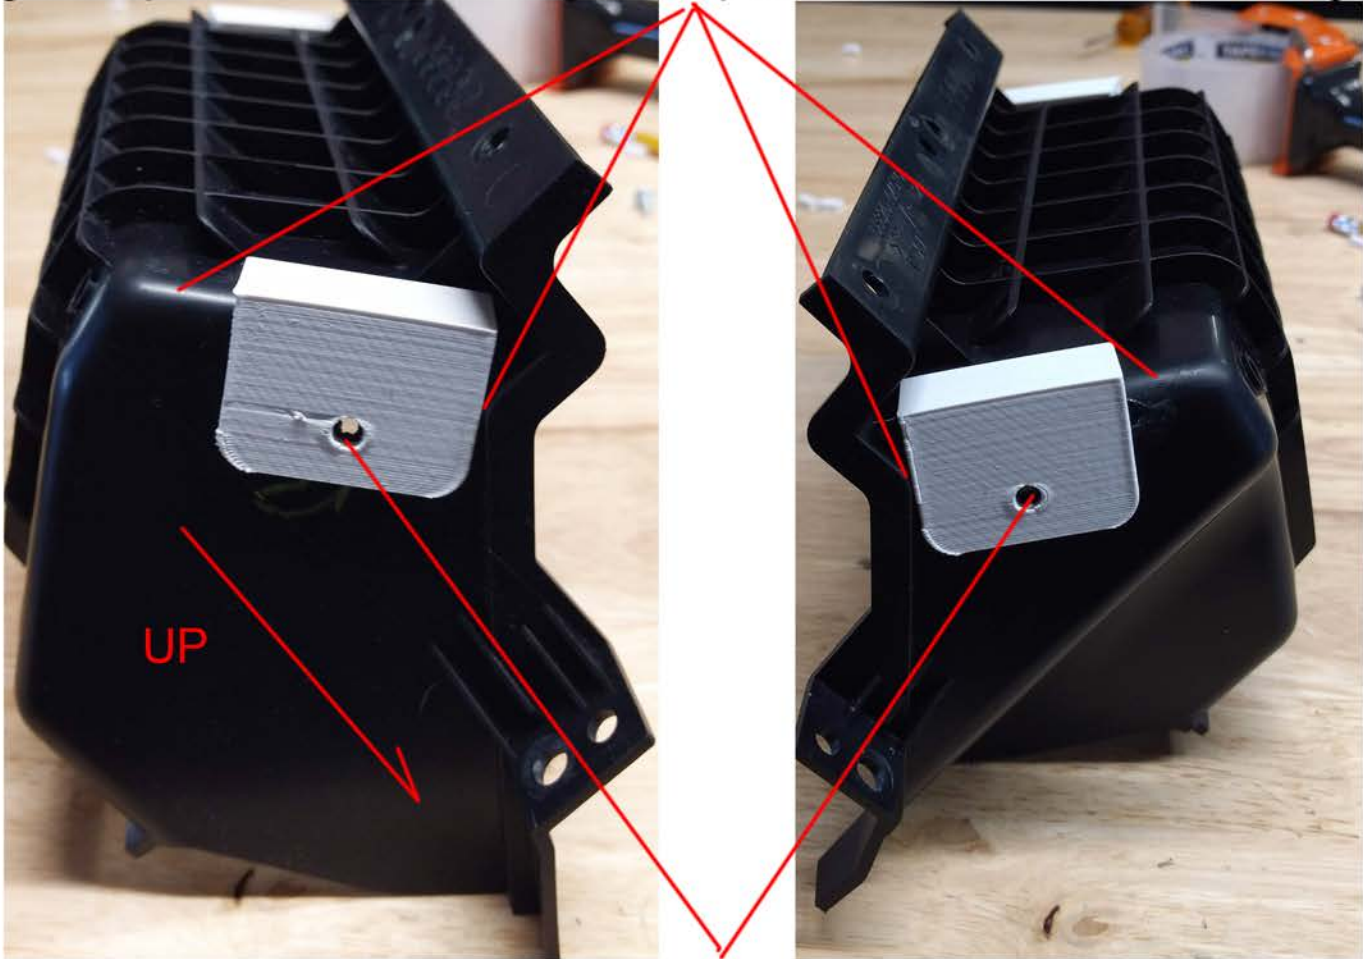

Drill 5/32 hole through template both sides

Any questions, please contact Scott at 720-307-7263
scott@stechswitch.com