




S-TECH 4Runner '10-'13 4 Switch Drill Template

Align template to surfaces shown
and push forward as far as it will go.

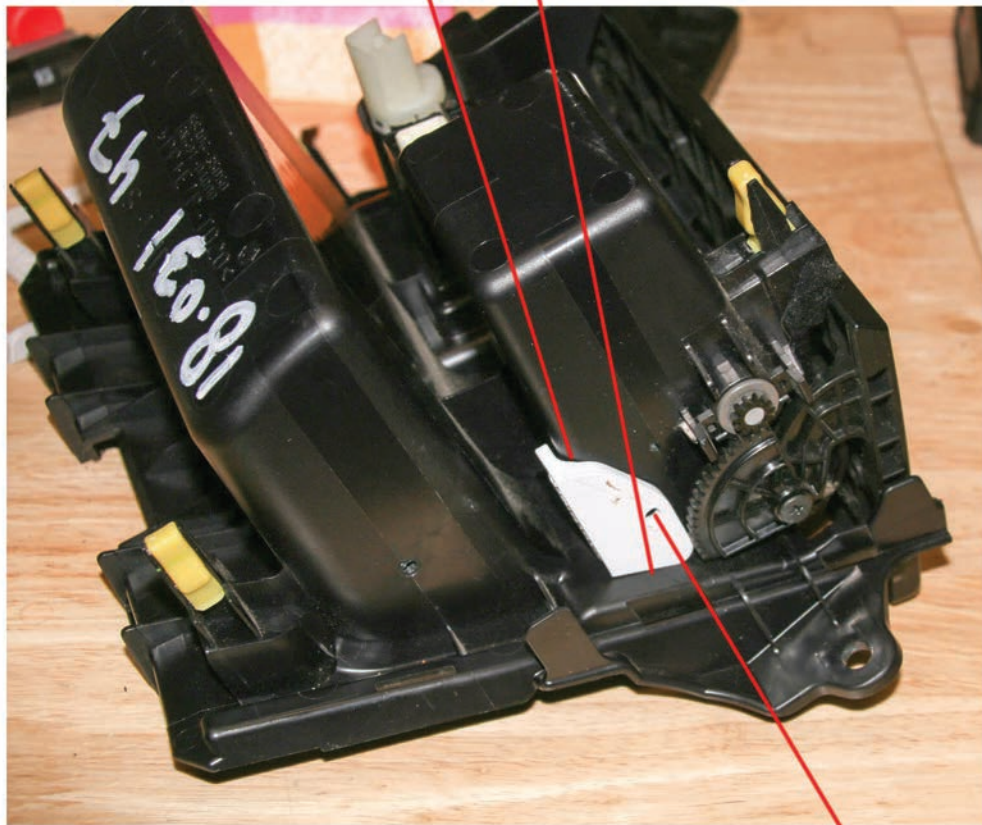

Drill 5/32" hole through template