




## **S-TECH 4Runner '10-'13 6 Switch Drill Template**

Align template to surfaces as shown

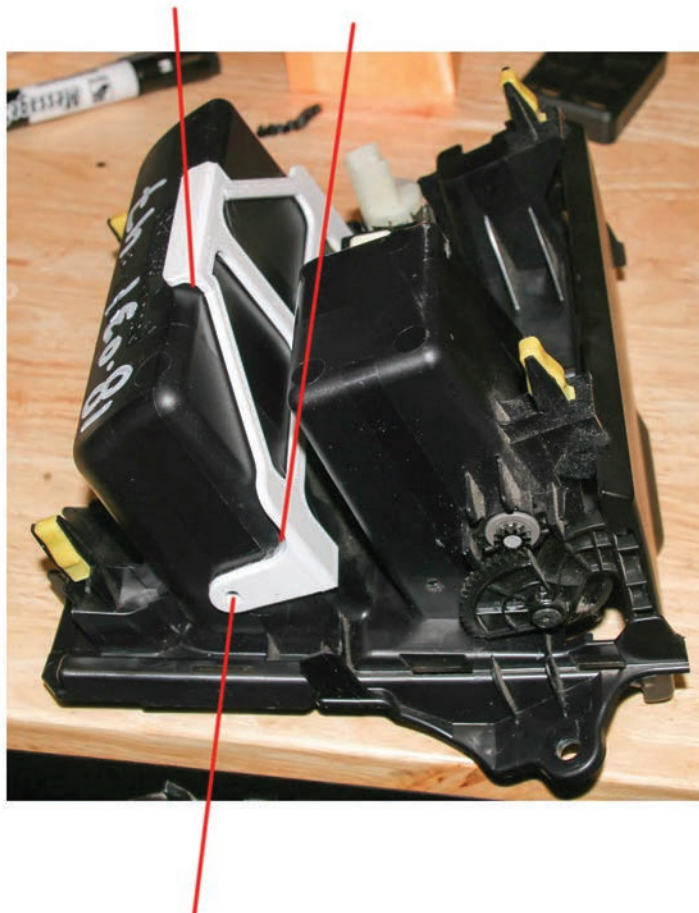

Drill 5/32" hole through template holes on both sides while ensuring template makes good contact with housing