




S-TECH JL Lower Install Update

Use of Mopar Cubby Alignment Washers

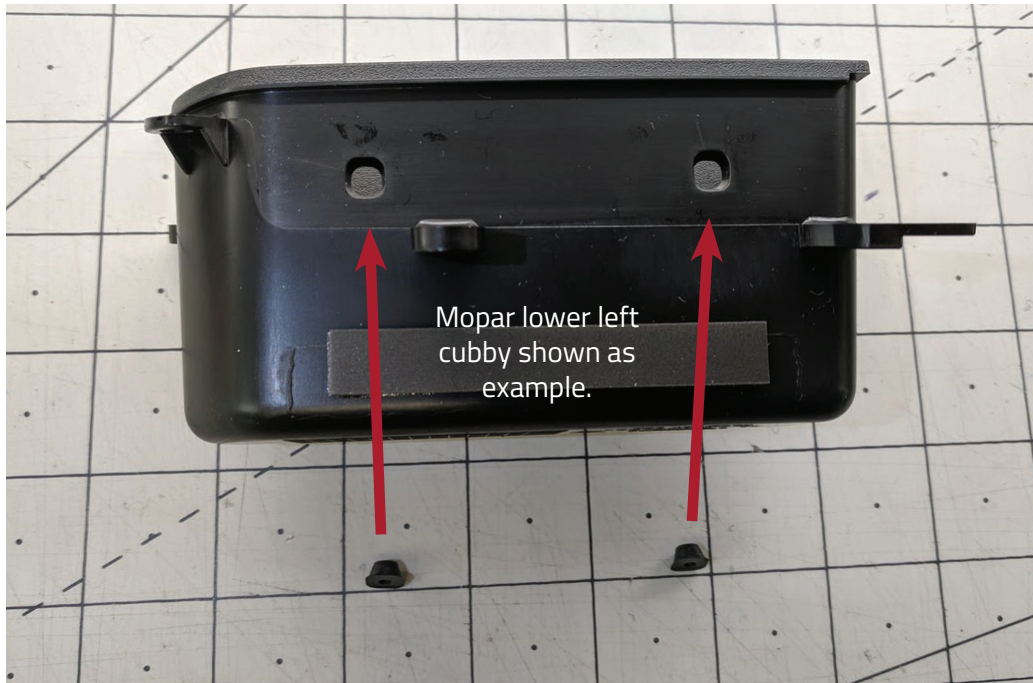

The two small plastic alignment washers (indicated with red arrows) must be used on all Mopar / JL cubbies to align the S-TECH face. All 4 brass grommet screws must also be used for the 6 + 2 and 8.

